

Document No.		Issue:	
Authorised by:		Authorised Date:	
Title:			

APPENDIX 1

Loading Flexi-T base to Manual Driver Tool

- Ensure the Flexi-T base is fitted into the driver as shown with the base security clip correctly in place.



Loading Flexi-T base to Delnorth CPD Petrol Driver Tool

- Ensure the Flexi-T base is fitted into the driving tool as shown with the base security clip correctly in place.



Loading Flexi-T base to Jackhammer Driver Tool


- Ensure the Flexi-T base is fitted into the driving tool as shown with the base security clip correctly in place.



APPENDIX 2

Starting the Delnorth CPD Petrol Driver

1. To start a cold engine, move the choke lever to the CLOSED Position. Note: To restart a warm engine, leave the choke in the OPEN position
2. Press the priming bulb repeatedly until fuel can be seen in the clear plastic fuel return tube
3. Turn the engine switch on the equipment to the ON position
4. Pull the starter grip lightly until you feel resistance, then pull briskly on the starter grip. Note: do not allow the starter grip to snap back against the engine.
5. If the choke lever has been moved to the CLOSED position to start the engine, gradually move it to the ON position as the engine warms up **NOTE: See Owner's manual for safety and maintenance instructions**

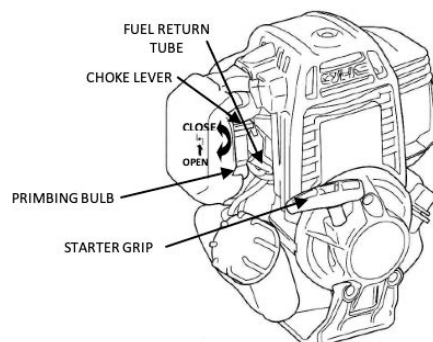

Installation instructions for the Delnorth CPD Petrol Driver

1. Start the engine as instructed above, bend you knees, then firmly holding the handles, carefully lift the unit to vertical.
2. Gently pull the throttle trigger until the hammer action is felt. Installation of the star picket Flexi-T base will then commence.
3. When you are satisfied that the star picket Flexi-T base is moving into the ground suitably, depress the throttle trigger fully and, keeping light weight on the driver, follow it down to prevent "bounce" through excessive impact.
4. Continue driving the base plate until it is straight and level and approx. 5mm off ground level.
5. Release the throttle, turn off the driver, remove the security clip and carefully slide the tool off the star picket base.

